






KEY/SAMPLE

QTY CUT

	1 Coordinate Fabric	1 FAT QUARTER 18" x 21"	A (1) 2-1/4" x 18" piece. B (1) 6" x 12" piece. C (1) 2-1/4" x 6" piece.
	2 MINI-PRINT FABRIC	1 FAT QUARTER 18" x 21"	D (1) 2-1/4" x 18" piece. E (1) 6" x 14" piece. F (1) 6" x 12" piece. G (1) 6" x 6-1/2" piece.
	3 FOCUS FABRIC	1 FAT QUARTER 18" x 21"	H (1) 2-1/4" x 18" piece. I (1) 6" x 7" piece. J (1) 6" x 12" piece.
	4 CLEAR PLASTIC OR MINI-PRINT FABRIC (OPTIONAL: FOR CLEAR OR SOLID POCKET)		K (1) 6" x 4" piece of clear plastic or (1) 6" x 8" piece of MINI-PRINT AND fold to 4" x 6".
	5 BINDING FABRIC	1/8 YD	L (1) 2-1/4" x 42".


ADDITIONAL MATERIALS:

(2) 3/4" x 3-1/2" of hook and loop velcro tape.

(1) 6" x 12" piece of batting.

(1) *OPTIONAL*: FAT QUARTER of plain white fabric in case under fabric shows through to top fabric (see *POCKET ASSEMBLY TIP*).

BACK VIEW

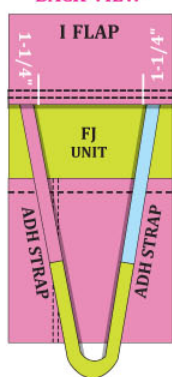

12. I FLAP: Fold and press I 6" x 7" piece in half, wrong sides together, to 6" x 3-1/2". Place and pin I FLAP, raw edges together, to top of FJ SIDE OF UNIT. Refer to left diagram.


13. Next measure 1-1/4" from left and right side of I FLAP and mark. Take ADH STRAP and slip raw edge tips in between the I FLAP and the FJ SIDE OF UNIT. Pin in place, *make sure strap is not twisted*. Stitch across closed folded side of I FLAP twice, see left diagram.

14. Turn bag over to B side, place E POCKET at the bottom of bag, with velcro part up. Then place CK unit at bottom of E POCKET, with C on top. *Note: Hold pieces in place with a clip, do not pin through plastic.*

15. Next place and pin G POCKET at top of bag, lining up top raw edges and attaching velcro on the inside of the pocket.

FINISHING: Using L, bind bag as usual. *Note: Apply binding to B side first, then flip to FJ side to finish.*

FINISHED SIZE: 8" L x 6" W.

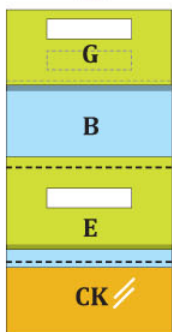

FRONT VIEW

FRONT OF BAG



BACK OF BAG




Note: If this Benartex pattern is included in a kit, any questions about the kit should be addressed to the vendor from whom you bought it.

BAG STRAP ASSEMBLY

1. Sew A, D and H 2-1/4" x 18" pieces via short ends to make a 2-1/4" x 53" piece (*trim piece if necessary to fit cross your body*).



2. Press ADH unit in half via long edge, wrong sides together, to 1-1/8" x 53" piece (2a). Next open ADH unit back up and fold the raw edges to align with previous FOLD LINE and press, wrong sides together (2b). Fold ADH unit again and press this time so there are no raw edges, and top stitch down. BAG STRAP measures 1/2" x 53" (2c). Set aside.

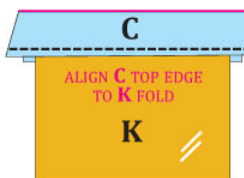

3. FRONT POCKET BINDING: Repeat step 2 using C 2-1/4" x 6" piece, *BUT DO NOT TOP STITCH ON LAST FOLD*. Next place K 4" x 6" PLASTIC OR MINI-PRINT piece between C fold and stitch, refer to diagram.

POCKET ASSEMBLY TIP: If your under fabric shows through to the top fabric—cut a plain white fabric and place it on the wrong side of your pocket fabric and fold it in with your regular piece, this will keep your fabric clean looking and not muddy.

4. E POCKET: Fold E 6" x 14" piece in half via short edge, wrong sides together, to 6" x 7". Fold CLOSED EDGE to 1/4", press and top stitch fold, as shown in diagram. E POCKET is now 6" x 6-3/4".

5. Next measure from bottom raw edge of E POCKET (top stitch side) 5" and mark. Then center velcro—smooth side up—above 5" mark on E POCKET and sew in place. Set aside.

6. G POCKET: Repeat step 4, using G 6" x 6-1/2" piece. G POCKET finish size is 6" x 3". Center and sew velcro 1/2" from bottom raw edge, rough side up.

7. Next flip G POCKET to back side and center another velcro, rough side up, near the top folded edge and sew in place.


8. J POCKET: Repeat step 4, using J 6" x 12" piece. After fold J POCKET measures 6" x 5-3/4".

BAG ASSEMBLY

9. Place wrong side of B 6" x 12" piece to 6" x 12" BATTING. With B on top, center and sew a velcro, smooth side up, 2-3/4" from top raw edge.

10. Turn B unit over to back side and pin in place the F 6" x 12" piece. Next pin in place the J POCKET.

11. PENCIL POCKET: From left side measure 1-1/2" and draw a line. Stitch on line and stitch a second line next to first stitch to make PENCIL POCKET.

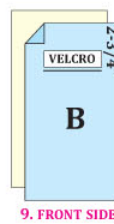

9. FRONT SIDE



11. PENCIL POCKET

10. BACK SIDE